

# Karaoke Machine Instructions

## Basic Machine Button Functions

1. Turn the FUNCTION knob on the top of the machine to DISC/USB/SD if using any of those options, and to AUX IN if playing music from a smart device. The light underneath will be **red** if the machine is on.
2. USB slot and SD Card slot on top is for playing recording music and vocal mix.
3. MASTER VOLUME knob on top left.
4. To open CD slot: hit OPEN DOOR button on top left. To close, make sure to press on upper right hand frame of the screen that says CLOSE until it clicks shut.

To see complete button functions, refer to **pages 8 and 9** in the instruction booklet.

## Basic Remote Control Functions

1. DISC/USB/SD button: press to switch between CD, USB, and SD sources.
2. SETUP: press to setup the TV settings according to your needs
3. KEY-: transposes the music key down
4. KEY+: transposes the music key up
5. FLAT: set the music key as normal
6. **RECORD/STOP**: If a USB or SD card is inserted, press this button to record vocal and music.
7. **RECORD PLAYBACK**: press to listen to what you **just** recorded.
8. Number buttons: use to specify a track number

9. PROGRAM: Press to listen to tracks in a certain order. Input the track numbers in the order you like, then hit the PLAY button. Select CLEAR to get rid of your track order.

To see complete button functions refer to **pages 11-14** in the instruction booklet.

### Connecting to TV

1. Connect RCA cable (yellow-video, red-audio, and white-audio) into the matching jacks on the TV. You must select an input on the TV to view lyrics on the screen (see **page 10** for diagram).

### Smart Device Connection

1. Insert the smart device holder into the two slots at the back of the machine.
2. Connect the AUX cable to the device, and the red and white ends to the karaoke machine. This cable does not show video, it will only play audio.
3. If you want to charge the smart device, connect its charging cable to the machine's USB port.